

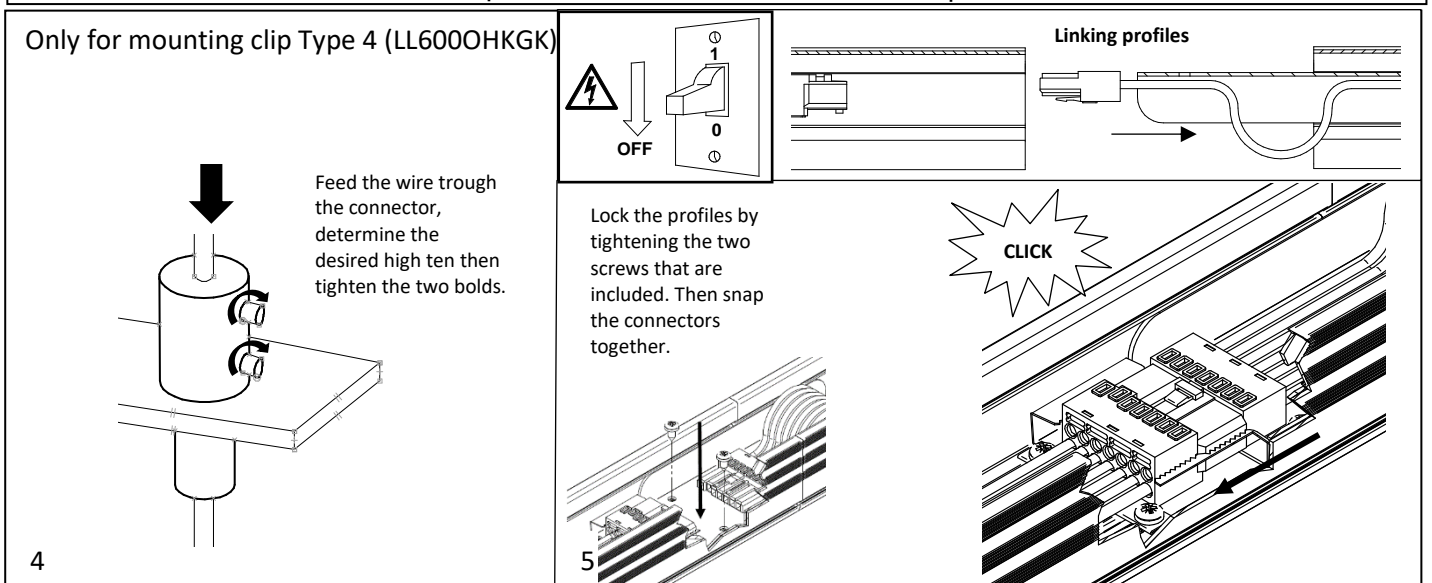
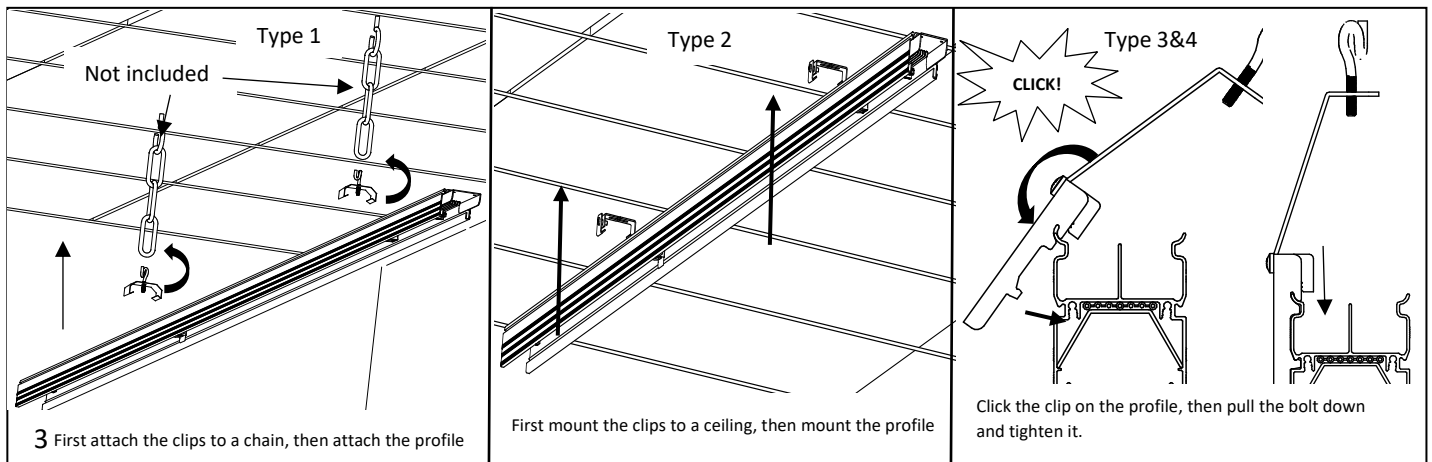
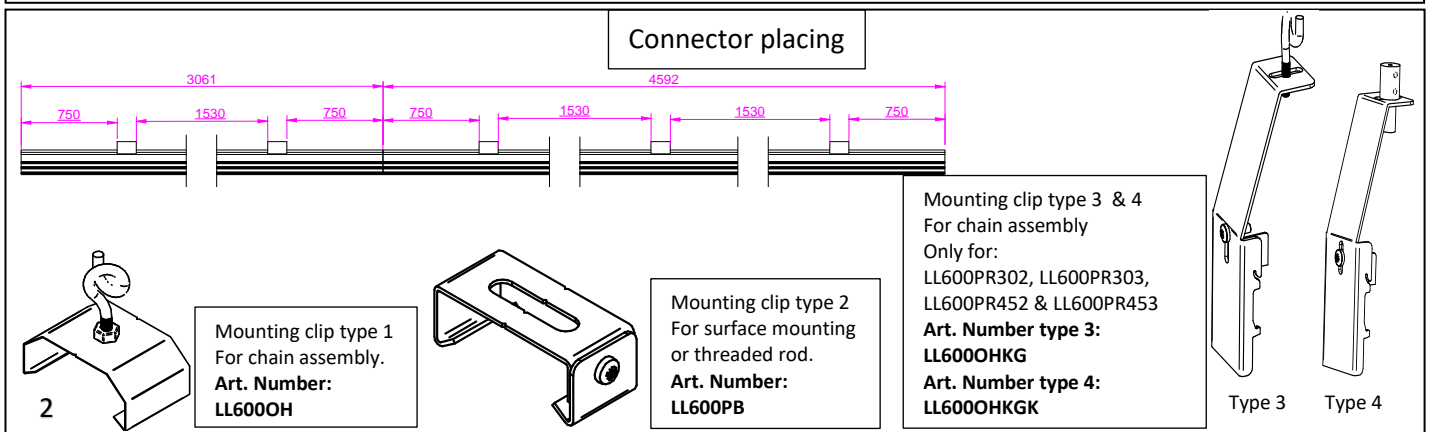



Installation manual WinLed Skyline

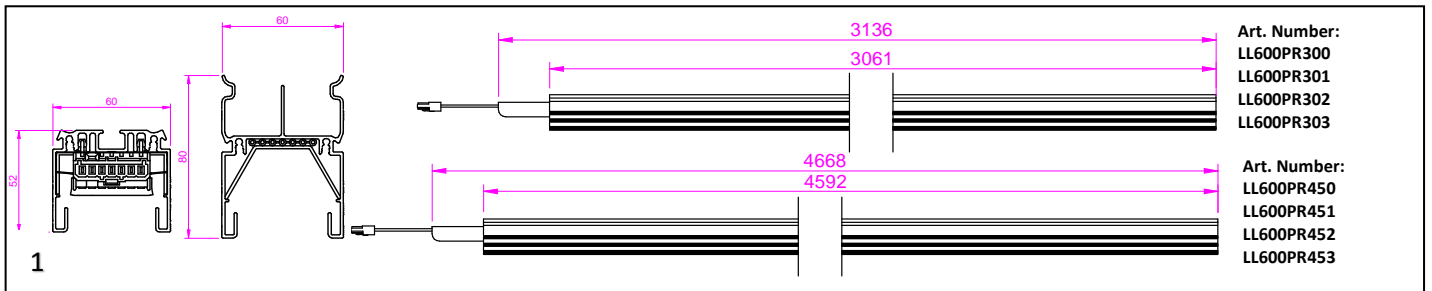

Startset
Art.
Number:
LL600SS

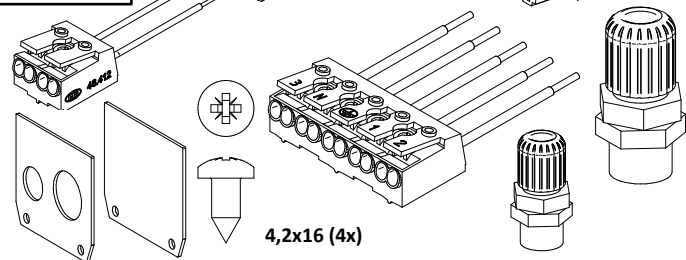


5 In LL600SSPG21 the terminalblock's are not included. Step 8&9 can be ignored.

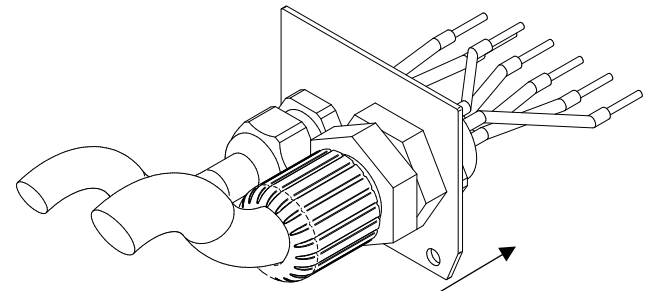

6 Feed the wires through the cable screw gland.

Connection for solid wire

Male/female →

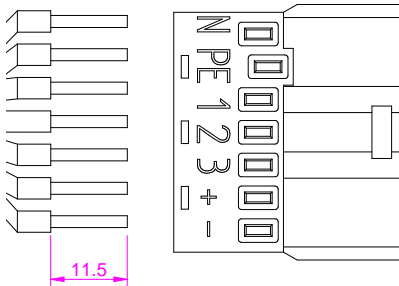

N	PE	1	2	3	+	-
Neutral	Ground	Phase1	Phase2	Phase3	Dim+	Dim-


7 Connect according to installation instructions!

Connection for stranded wire




Female

Always make sure the markings on the terminal blocks and the connectors correspond!

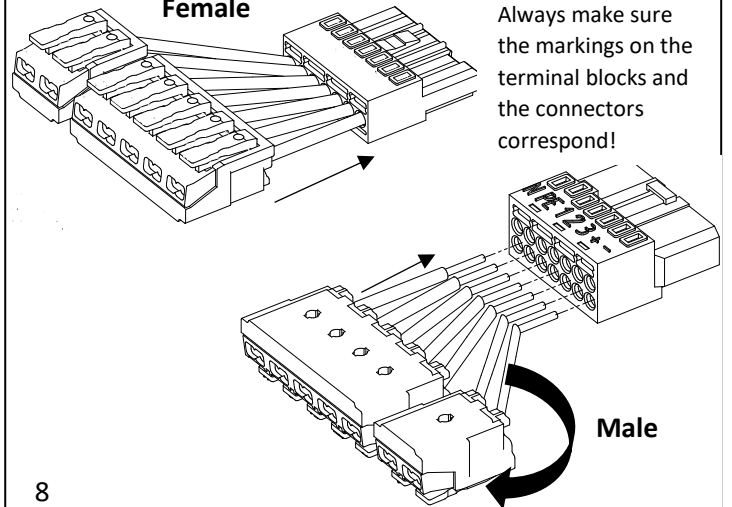

8


Connection for stranded wire

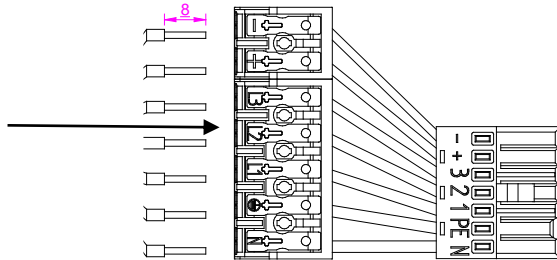

N	PE	1	2	3	+	-
Neutral	Ground	Phase1	Phase2	Phase3	Dim+	Dim-

9 Connect according to installation instructions!


Connecting the startset with male connector

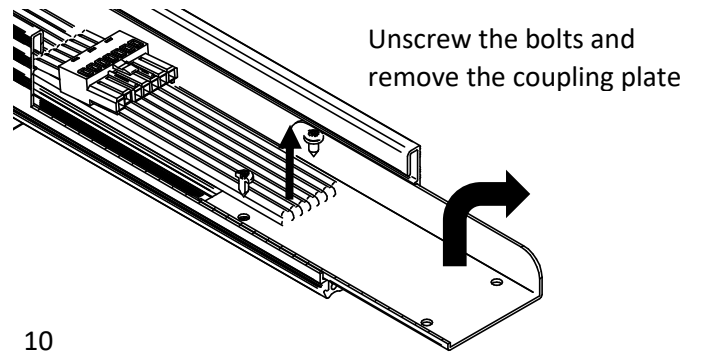


10

Male connection

Female connection

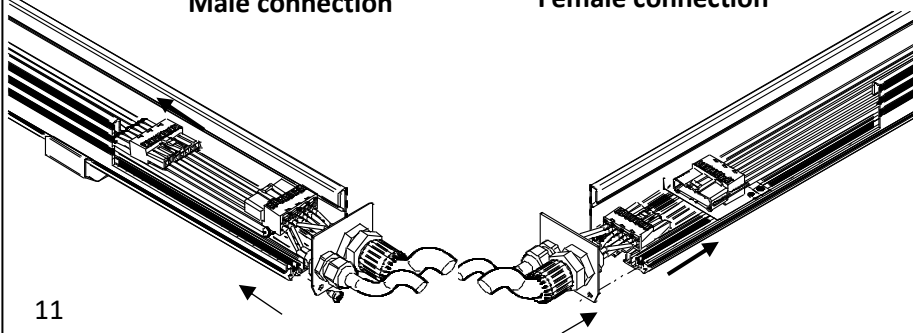

11

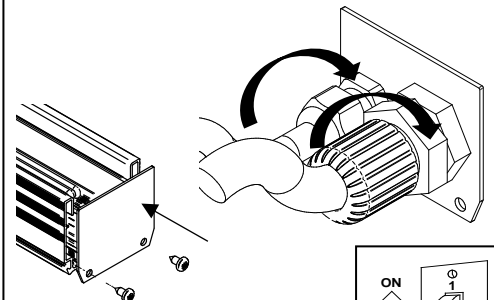

12

